


## Remote Control (frc3000) for the fos3000a & fos3000d

- Illumination level up/down
- Programmed illumination levels
- Manual ON/OFF



To complement the **fos3000** range of occupancy sensors, a hand held infra-red remote control - **frc3000** - is available. The **frc3000** will operate with **fos3000a** and **fos3000d**. It can manually switch On/Off, adjust the level of illumination, and set/store up to four programmed light levels. Using the Up/Down illumination level button, values can be stored manually as programmed levels in memory.

### frc3000 instructions

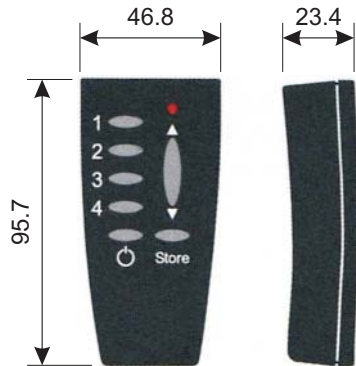

Use the illumination level Up/Down buttons for manual level adjustment. To programme an illumination level, use the Up/Down button to adjust, followed by Store and then the pre-set number. To manually switch On, press any of the pre-set buttons 1 to 4 and to switch Off press Off button.

Remote control requires two "AAA" batteries (supplied).

Every effort has been made to ensure the accuracy of the information on this data sheet. In the interests of continued product improvement, Flex Connectors reserve the right to vary specification.

flex connectors

Unit 8, The Gate Centre, Syon Gate Way, Brentford, Middlesex TW8 9DD, England, UK

Telephone : 020 8580 1066 Fax : 020 8580 1062

Website : [www.flexconnectors.co.uk](http://www.flexconnectors.co.uk) E-mail : [info@flexconnectors.co.uk](mailto:info@flexconnectors.co.uk)


## Remote Control (frc3000) for the fos3000a & fos3000d

- Illumination level up/down
- Programmed illumination levels
- Manual ON/OFF



To complement the **fos3000** range of occupancy sensors, a hand held infra-red remote control - **frc3000** - is available. The **frc3000** will operate with **fos3000a** and **fos3000d**. It can manually switch On/Off, adjust the level of illumination, and set/store up to four programmed light levels. Using the Up/Down illumination level button, values can be stored manually as programmed levels in memory.

### frc3000 instructions

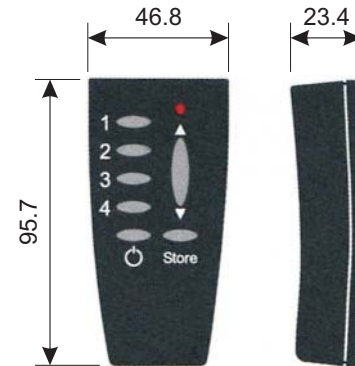

Use the illumination level Up/Down buttons for manual level adjustment. To programme an illumination level, use the Up/Down button to adjust, followed by Store and then the pre-set number. To manually switch On, press any of the pre-set buttons 1 to 4 and to switch Off press Off button.

Remote control requires two "AAA" batteries (supplied).

Every effort has been made to ensure the accuracy of the information on this data sheet. In the interests of continued product improvement, Flex Connectors reserve the right to vary specification.

flex connectors

Unit 8, The Gate Centre, Syon Gate Way, Brentford, Middlesex TW8 9DD, England, UK

Telephone : 020 8580 1066 Fax : 020 8580 1062

Website : [www.flexconnectors.co.uk](http://www.flexconnectors.co.uk) E-mail : [info@flexconnectors.co.uk](mailto:info@flexconnectors.co.uk)