


Circuit diagram for fnc2000 / AT / E Controllers


fnc2000/AT/E - Controllers

Includes Integral Emergency Test

The **fnc2000/AT/E** is a control device which can plug directly into any of the **flex7** range of connection units or a 7-pole single socket outlet. Working with at least a switch or together with a plug-in sensor head, the device will control the connected mains rated luminaires ON/OFF and will be able to carry out an emergency test. The exact operation will largely depend on which of the input devices are connected. Note that any connected switch or sensor head will be operating at ELV.

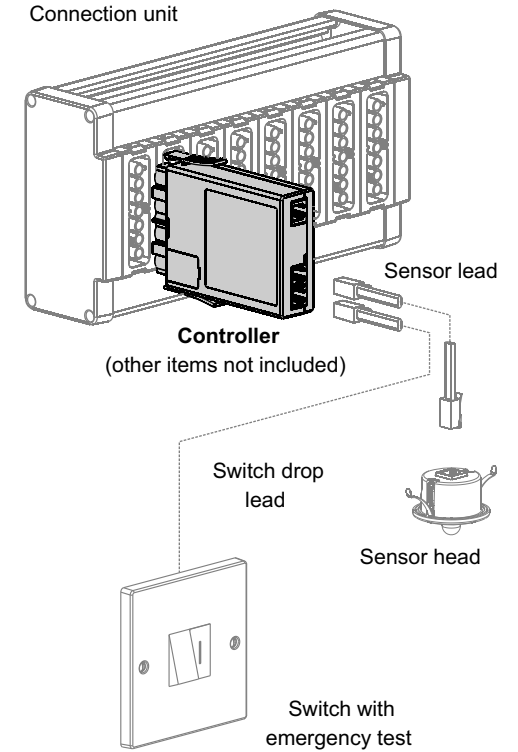

Configuring the fnc2000/AT/E controller and wiring the connection unit

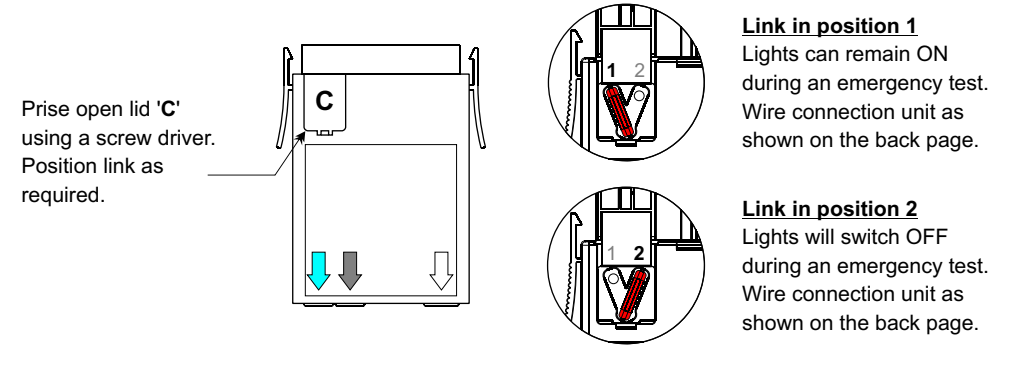


Rating	Supply Voltage : 220V-240V, 50Hz, ~
Load	Fluorescent & Incandescent Lighting : 6A
	Compact Fluorescent Lighting : 3A

Using a fnc2000/AT/E controller with a switch only

* Refer to leaflet *Networking Sensors*, leaflet number 17/245.

Note:

Multiple switches can be connected in parallel. 'Y' connectors are available to enable two switch drop leads to be connected into one point. (Part No. fsy/A - adaptor).

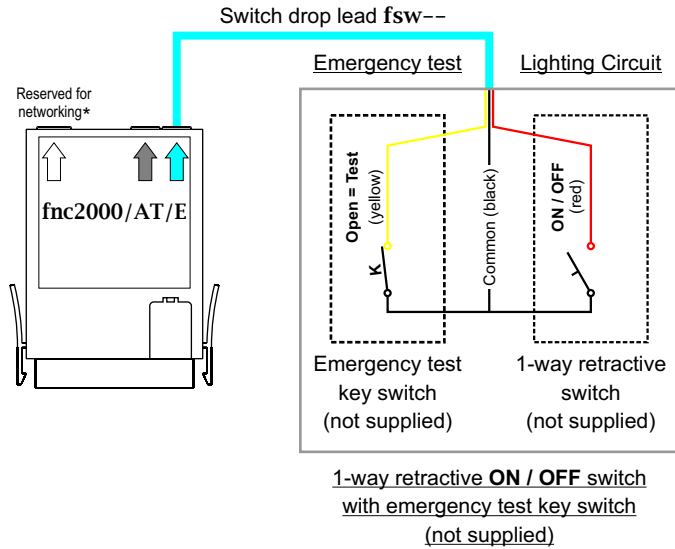

Operation:


Switch control:

Lighting circuit : A pulse toggles the lights ON and OFF only.

Operation for the emergency test:

Operate key switch to carry out an emergency test.

Using fnc2000/AT/E controller with a sensor head and a switch

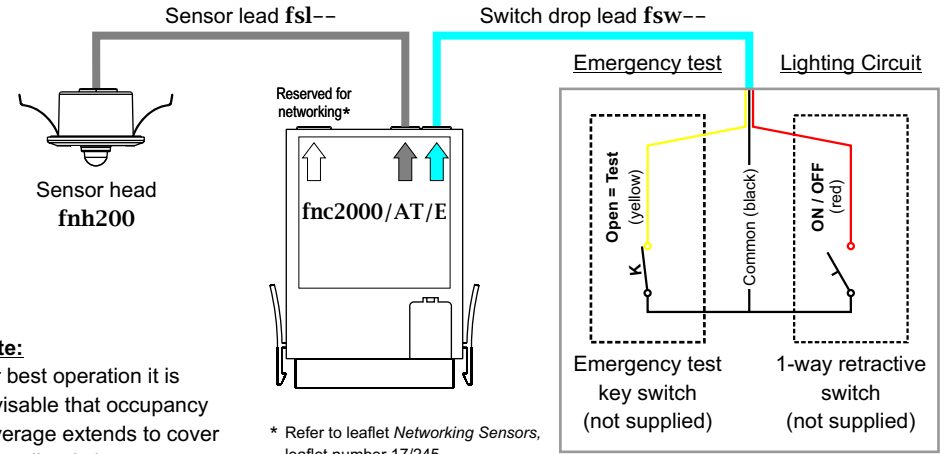

Note:

For best operation it is advisable that occupancy coverage extends to cover the wall switch.

* Refer to leaflet *Networking Sensors*, leaflet number 17/245.

Note:

Multiple switches can be connected in parallel. 'Y' connectors are available to enable two switch drop leads to be connected into one point. (Part No. fsy/A - adaptor).

Operation:

Switch control: A pulse - toggles the lights ON and OFF.

Absence detection: When occupancy is no longer detected, lights will switch OFF after a pre-selected *time-out* period.

Operation for the emergency test:

Operate key switch to carry out an emergency test.

Note: Alternative operational options not necessarily shown above are available using the frc/set setup remote control. Full instructions for setting up the sensor are supplied with the sensor head and the frc/set remote control - both ordered separately.