




Includes Integral Emergency Test

The **fnc2000/AT/E** is a control device which can plug directly into any of the **eZeBox** range of connection units or a 7-pole single socket outlet. Working with at least a switch or together with a plug-in sensor head, the device will control the connected mains rated luminaires ON/OFF and will be able to carry out an emergency test. The exact operation will largely depend on which of the input devices are connected. Note that any connected switch or sensor head will be operating at ELV.

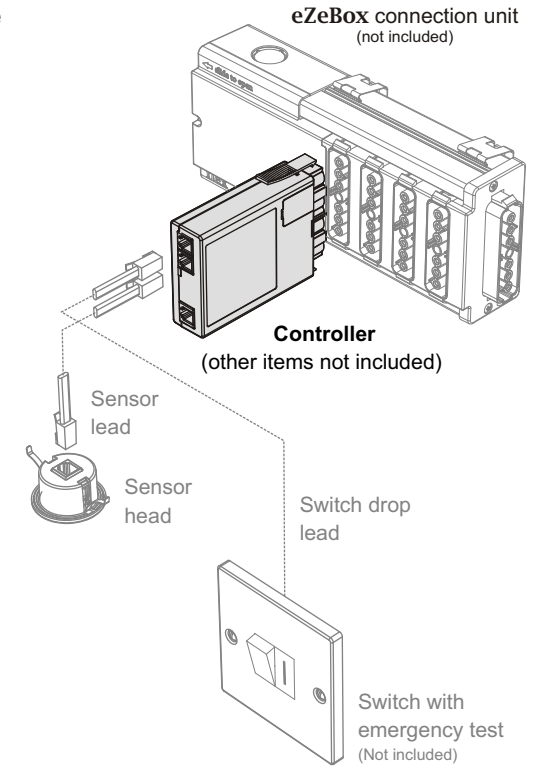


Configuring the fnc2000/AT/E controller and wiring the connection unit

Prise open lid 'C' using a screw driver. Position link as required.

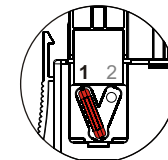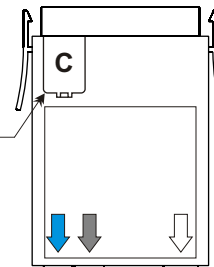

Link in position 1
Lights can remain ON during an emergency test. Wire connection unit as shown in option A. Please refer to the back page for details.



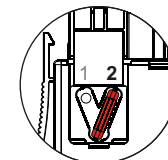


Link in position 2
Lights will switch OFF during an emergency test. Wire connection unit as shown in option A or B. Please refer to the back page for details.

Rating	
Supply Voltage	: 230V~ 50Hz
Load	
Flourescent & Incandescent Lighting	: 6A
Compact Flourescent Lighting	: 3A

Using a fnc2000/AT/E controller with a switch only

* Refer to leaflet *Networking Sensors*, leaflet number 17/245.

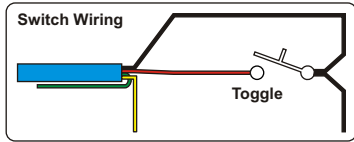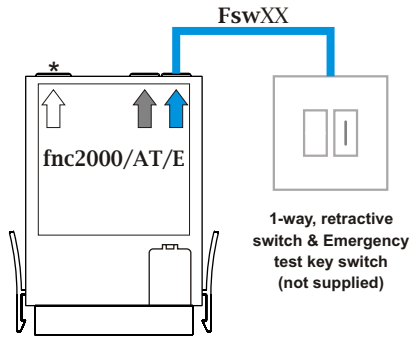

Note:

Multiple switches can be connected in parallel. 'Y' connectors are available to enable two switch drop leads to be connected into one point. (Part No. *fsy/A* - adaptor)

Operation:

Switch control:


Pulse - toggles the lights ON or OFF.

Emergency Test:

Operate key switch to carry out an emergency test.



Using fnc2000/AT/E controller with a sensor head and a switch

* Refer to leaflet *Networking Sensors*, leaflet number 17/245.

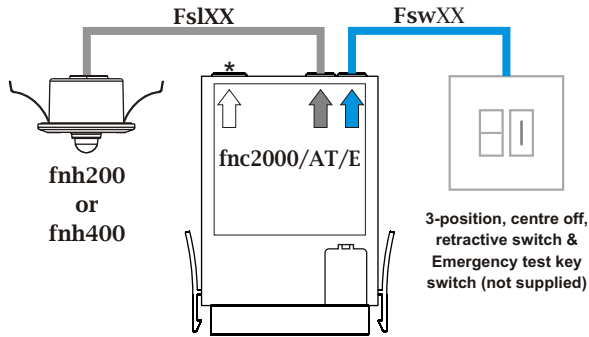

Note:

For best operation it is advisable that occupancy coverage extends to cover the wall switch.

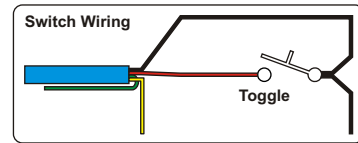

Note:

Multiple switches can be connected in parallel. 'Y' connectors are available to enable two switch drop leads to be connected into one point (Part No. *fsy/A* - adaptor).

Operation:

Switch control:

Pulse - toggles the lights ON or OFF.

Absence detection: When occupancy is no longer detected, lights will switch OFF after a pre-selected *time-out* period.

Emergency Test:

Operate key switch to carry out an emergency test.

Daylight dependency (fnh400 only): During periods of occupancy the lights will switch OFF if the ambient light detected under the sensor head exceeds the *set level*.

Note: Alternative operational options not necessarily shown above are available using the *frc/set* setup remote control.

Full instructions for setting up the sensor are supplied with the sensor head and the *frc/set* remote control - both ordered separately.

Circuit diagram for fnc2000/AT/E

